# COOKTOP PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**
**(White) (Black) (Designer White)(Designer Biscuit)**

30" GAS FREESTANDING
SELF CLEAN RANGE
SEALED BURNER

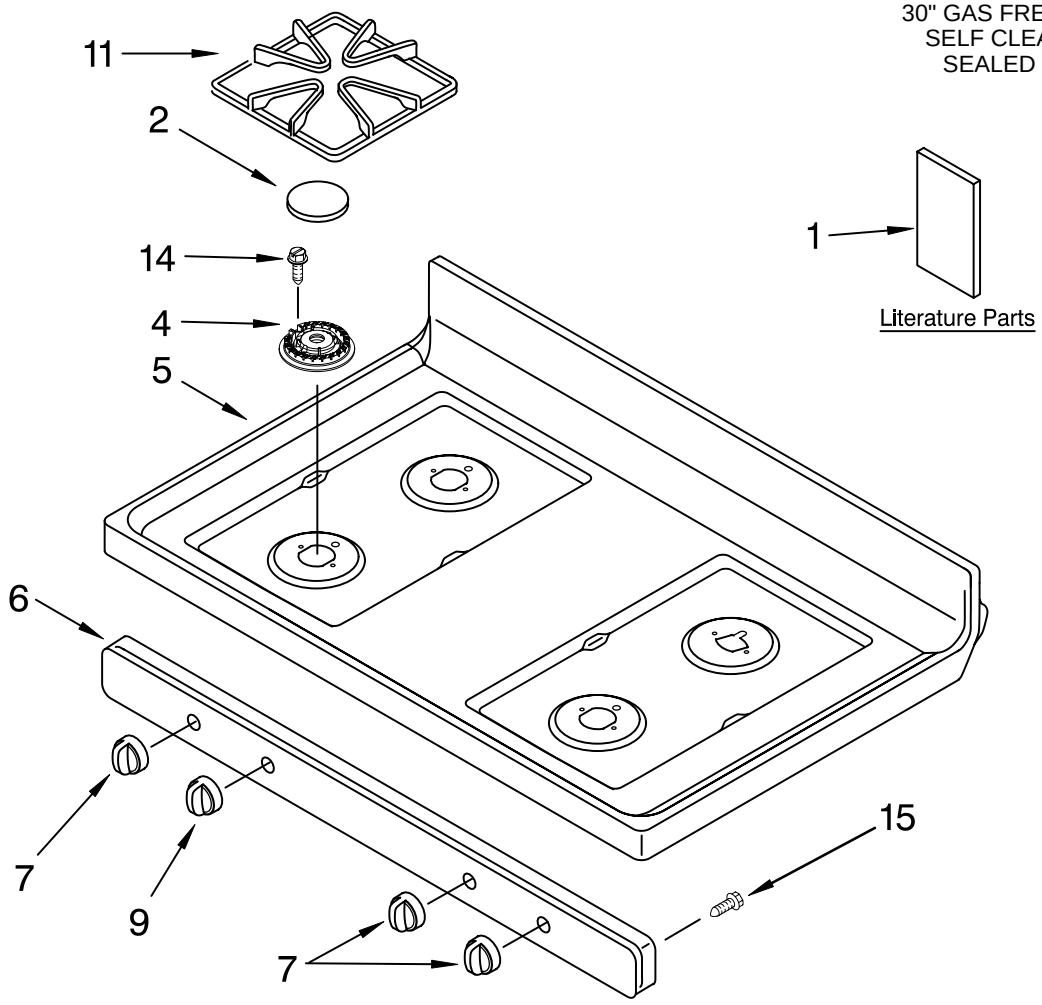


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Literature Parts |
| | LIT9756413 | Instructions, Installation |
| | LIT8523048 | Installation Instr (Template) |
| | LIT9756385 | Guide, Use & Care |
| | LIT9755996 | Tech Sheet |
| | LIT3191638 | Safer Cooking Tips |
| 2 | | Cap, Burner Left Front |
| | 3191904 | Black |
| | 3191905 | Grey |
| | 8273345 | Espresso |
| | | R. Front, L. Rear |
| | 3191901 | Black |
| | 3191903 | Grey |
| | 8273344 | Espresso |
| | | Right Rear |
| | 3191898 | Black |
| | 3191899 | Grey |
| | 8273343 | Espresso |
| 4 | | Burner |
| | 4455981 | Left Front |
| | 4455980 | R. Front, L. Rear |
| | 4455979 | Right Rear |
| 5 | | Cooktop |
| | 8272251 | White |
| | 8272743 | Biscuit |
| | 8272253 | Black |
| 6 | | Panel, Manifold |
| | 8523855 | Black |
| | 8523854 | White |
| | 8523856 | Biscuit |
| 7 | | Knob, Control (3) |
| | 8273103 | Black |
| | 8273104 | White |
| | 8273106 | Biscuit |
| 9 | | Knob, Powerburner |
| | 8273111 | Black |
| | 8273112 | White |
| | 8273114 | Biscuit |
| 11 | | Grate, Burner (4) |
| | 8522851 | Black |
| | 8522850 | Grey |
| | 8522853 | Espresso |
| 14 | 3400701 | Screw |
| 15 | 3196557 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**
**(White) (Black) (Designer White)(Designer Biscuit)**

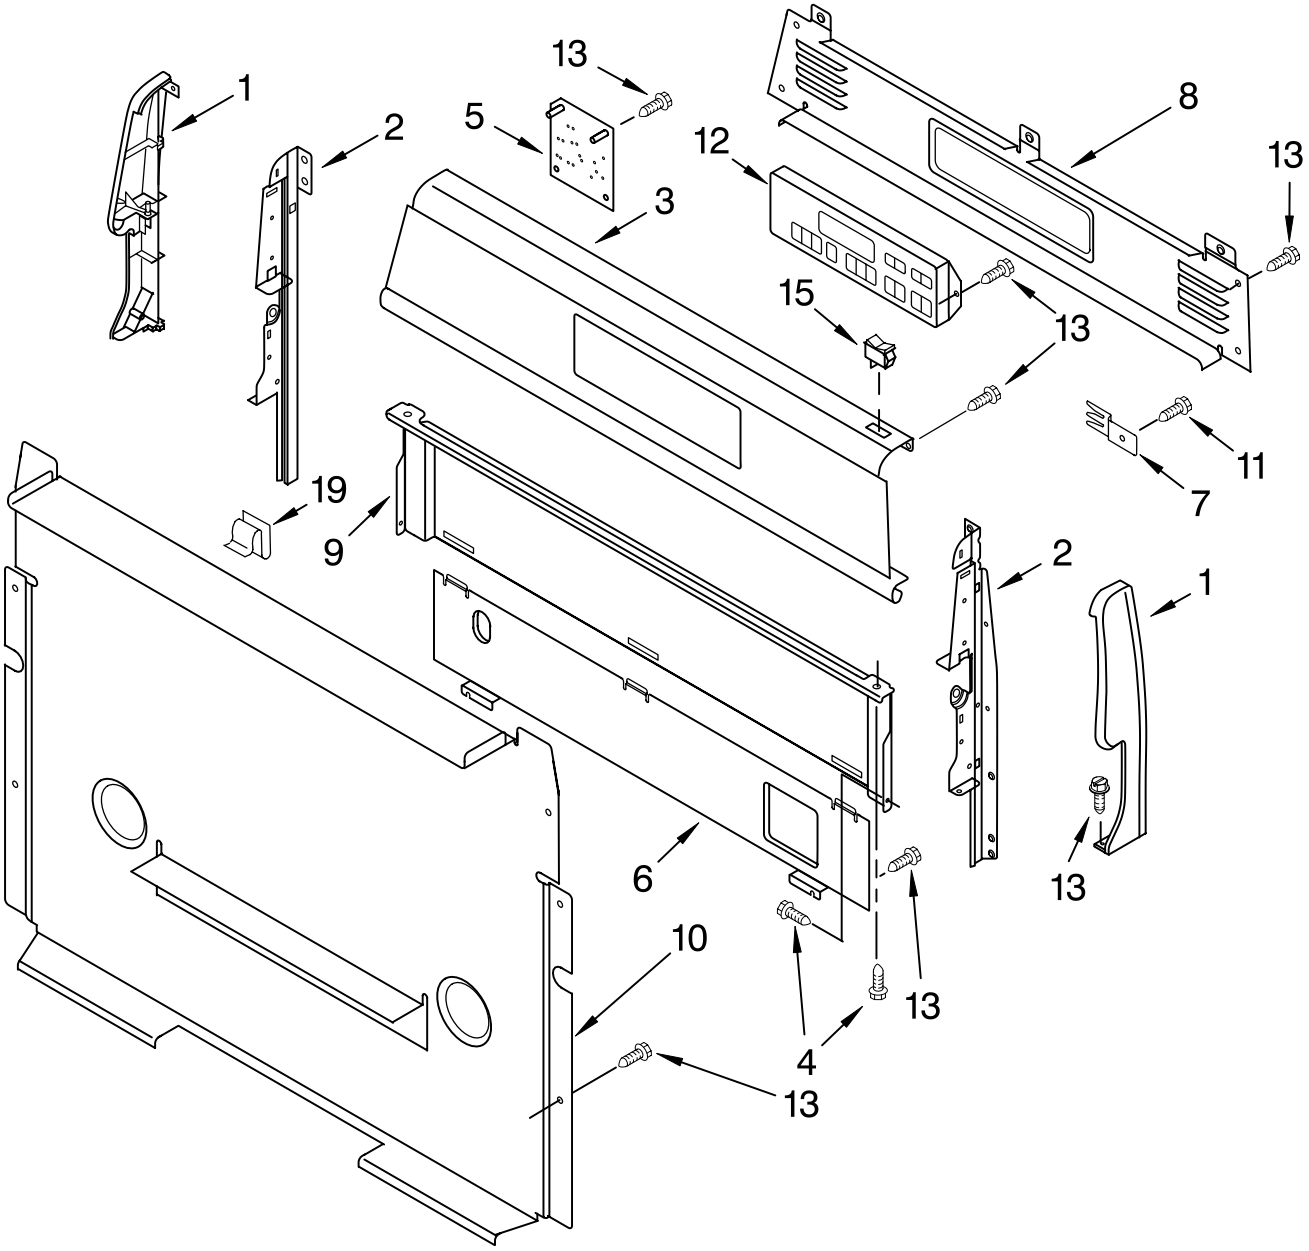


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Endcap, Left Hand |
| | 3186188 | Black |
| | 3186190 | White |
| | 8272507 | Biscuit |
| | | Endcap, Right Hand |
| | 3186189 | Black |
| | 3186191 | White |
| | 8272508 | Biscuit |
| 2 | | Support, Endcap |
| | 8523408 | Left Hand |
| | 8523409 | Right Hand |
| 3 | | Panel, Backguard |
| | 8523932 | Black |
| | 8523931 | White |
| | 8523930 | Biscuit |
| 4 | 4449746 | Screw |
| 5 | 8522964 | Module, Spark |
| 6 | 8053505 | Shield, Lower Heat |
| 7 | 8523412 | Bracket, Support |
| 8 | 9756301 | Cover, Upper |
| 9 | 8053910 | Shield, Heat |
| 10 | 8273132 | Cover, Lower |
| 11 | 3196169 | Screw |
| 12 | | Control, Range |
| | 6610394 | Black |
| | 6610395 | White |
| | 6610396 | Biscuit |
| 13 | 3196178 | Screw |
| 15 | | Switch, Rocker |
| | 3148564 | Black |
| | 3149360 | White |
| | 8273501 | Biscuit |
| 19 | 8273564 | Clip |

# MANIFOLD PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**

**(White) (Black) (Designer White)(Designer Biscuit)**

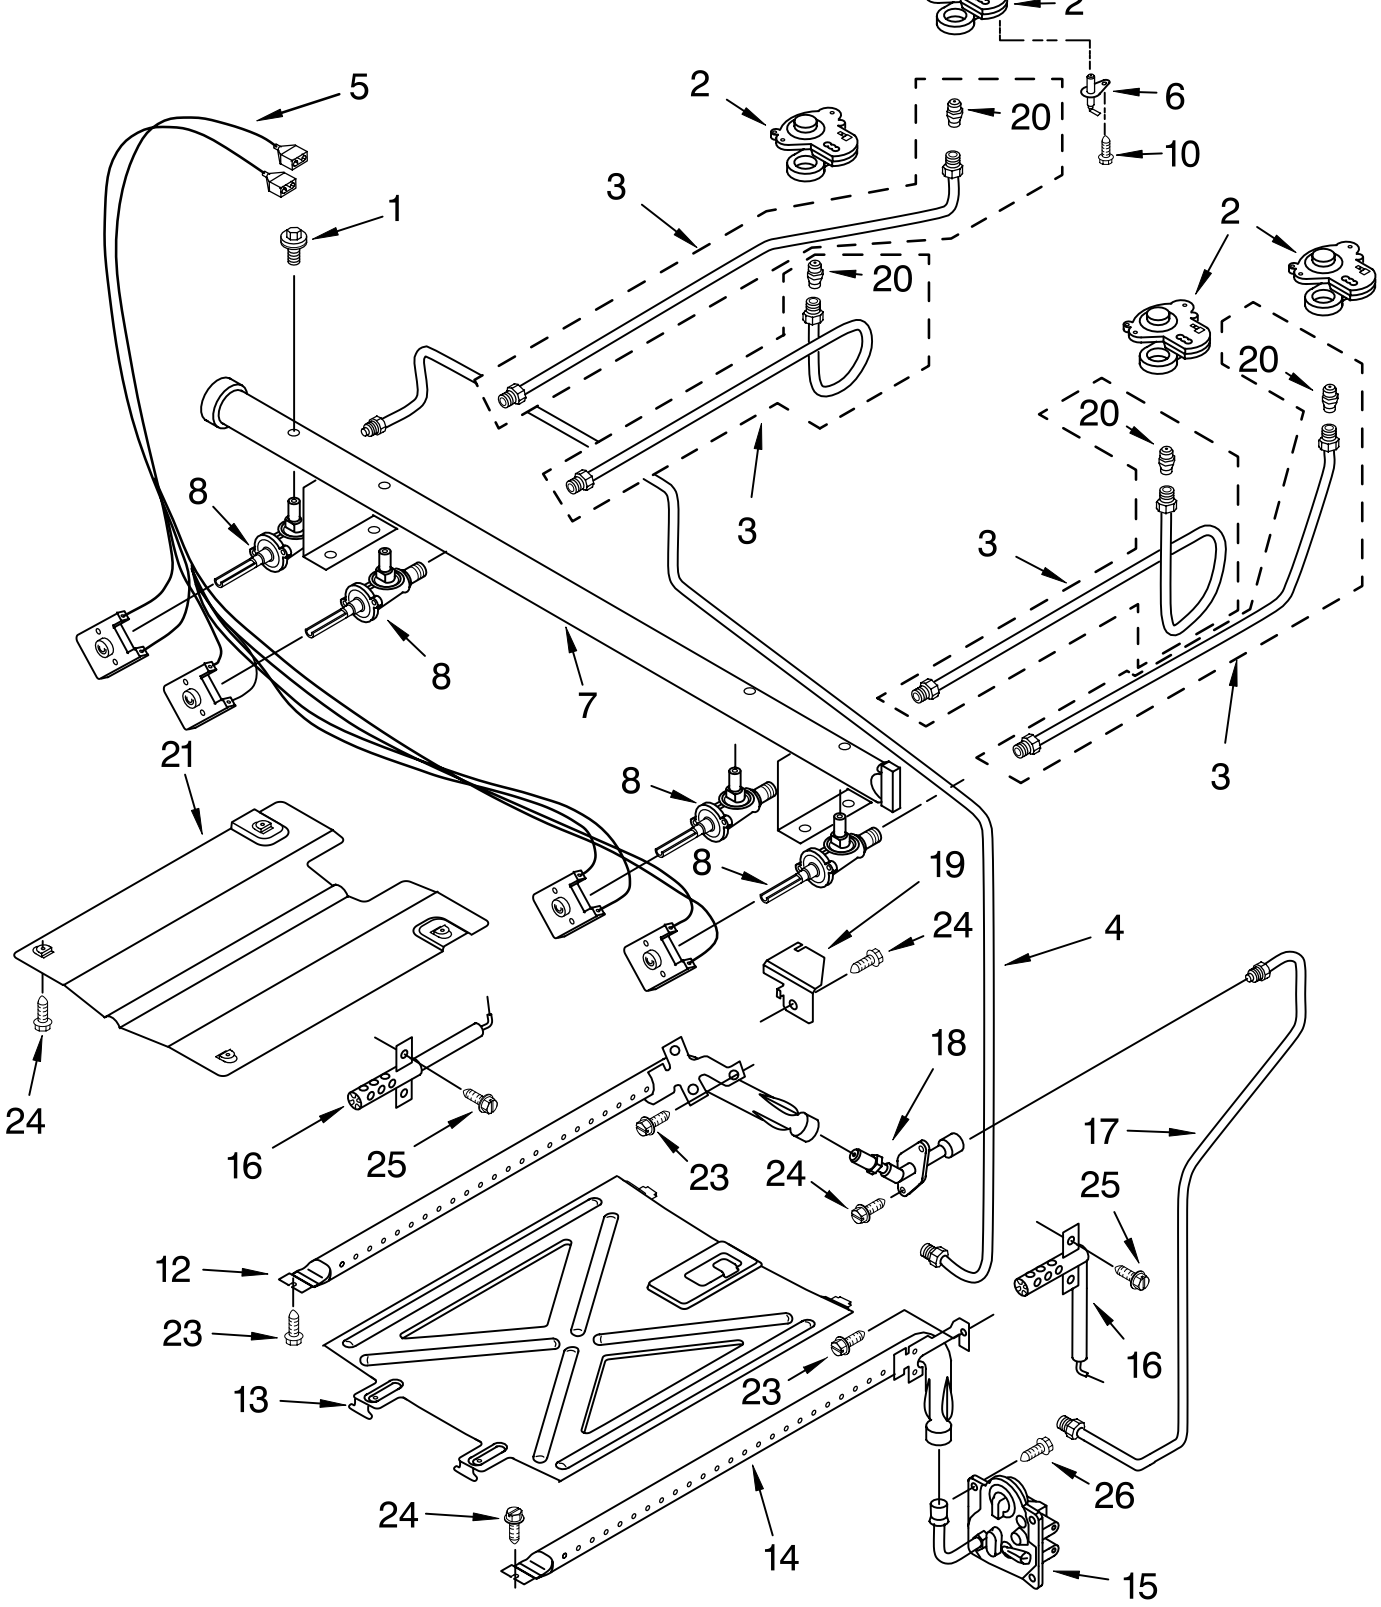


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MANIFOLD PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**
**(White) (Black) (Designer White)(Designer Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 8273096 | Screw, Valve |
| 2 | | Burner Base |
| | 8273700 | Large (4) |
| 3 | | Tubing, Burner W/Orifice |
| | 8273693 | Left Front |
| | 8273698 | Left Rear |
| | 8273695 | Right Front |
| | 8273697 | Right Rear |
| 4 | 8523402 | Tubing (Manifold to Regulator) |
| 5 | 8523406 | Harness, Igniter (W/Switches) |
| 6 | 8523793 | Electrode (4) |
| 7 | 8523407 | Pipe, Manifold |
| 8 | | Valve |
| | 9757218 | LF − RF − LR |
| | 8273004 | Right Rear |
| 9 | 8273060 | Nut (4) |
| 10 | 8273062 | Screw (4) |
| 12 | 8054078 | Burner, Broiler |
| 13 | 8053970 | Spreader, Flame (Oven) |
| 14 | 8054077 | Burner, Bake |
| 15 | 8054079 | Valve, Gas |
| 16 | | Igniter |
| | 8054129 | Broil |
| | 8054130 | Bake |
| 17 | 8272222 | Tubing (Broiler Fitting To Valve) |
| 18 | 3186489 | Fitting, Broiler |
| 19 | 8272403 | Cover, Igniter |
| 20 | | Orifice, Burner |
| | 8273064 | Left Front |
| | 8273065 | Right Front |
| | 8273066 | Left Rear |
| | 8273067 | Right Rear |
| 21 | 8053262 | Spreader, Flame (Broiler) |
| 23 | 3196265 | Screw |
| 24 | 3196176 | Screw |
| 25 | 3196385 | Screw |
| 26 | 3400016 | Screw |

Following Parts Not Illustrated

| | | |
|---|---|---|
| | 8523418 | Spuds, LP Gas (Kit of 4) |

# CHASSIS PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**

**(White) (Black) (Designer White)(Designer Biscuit)**

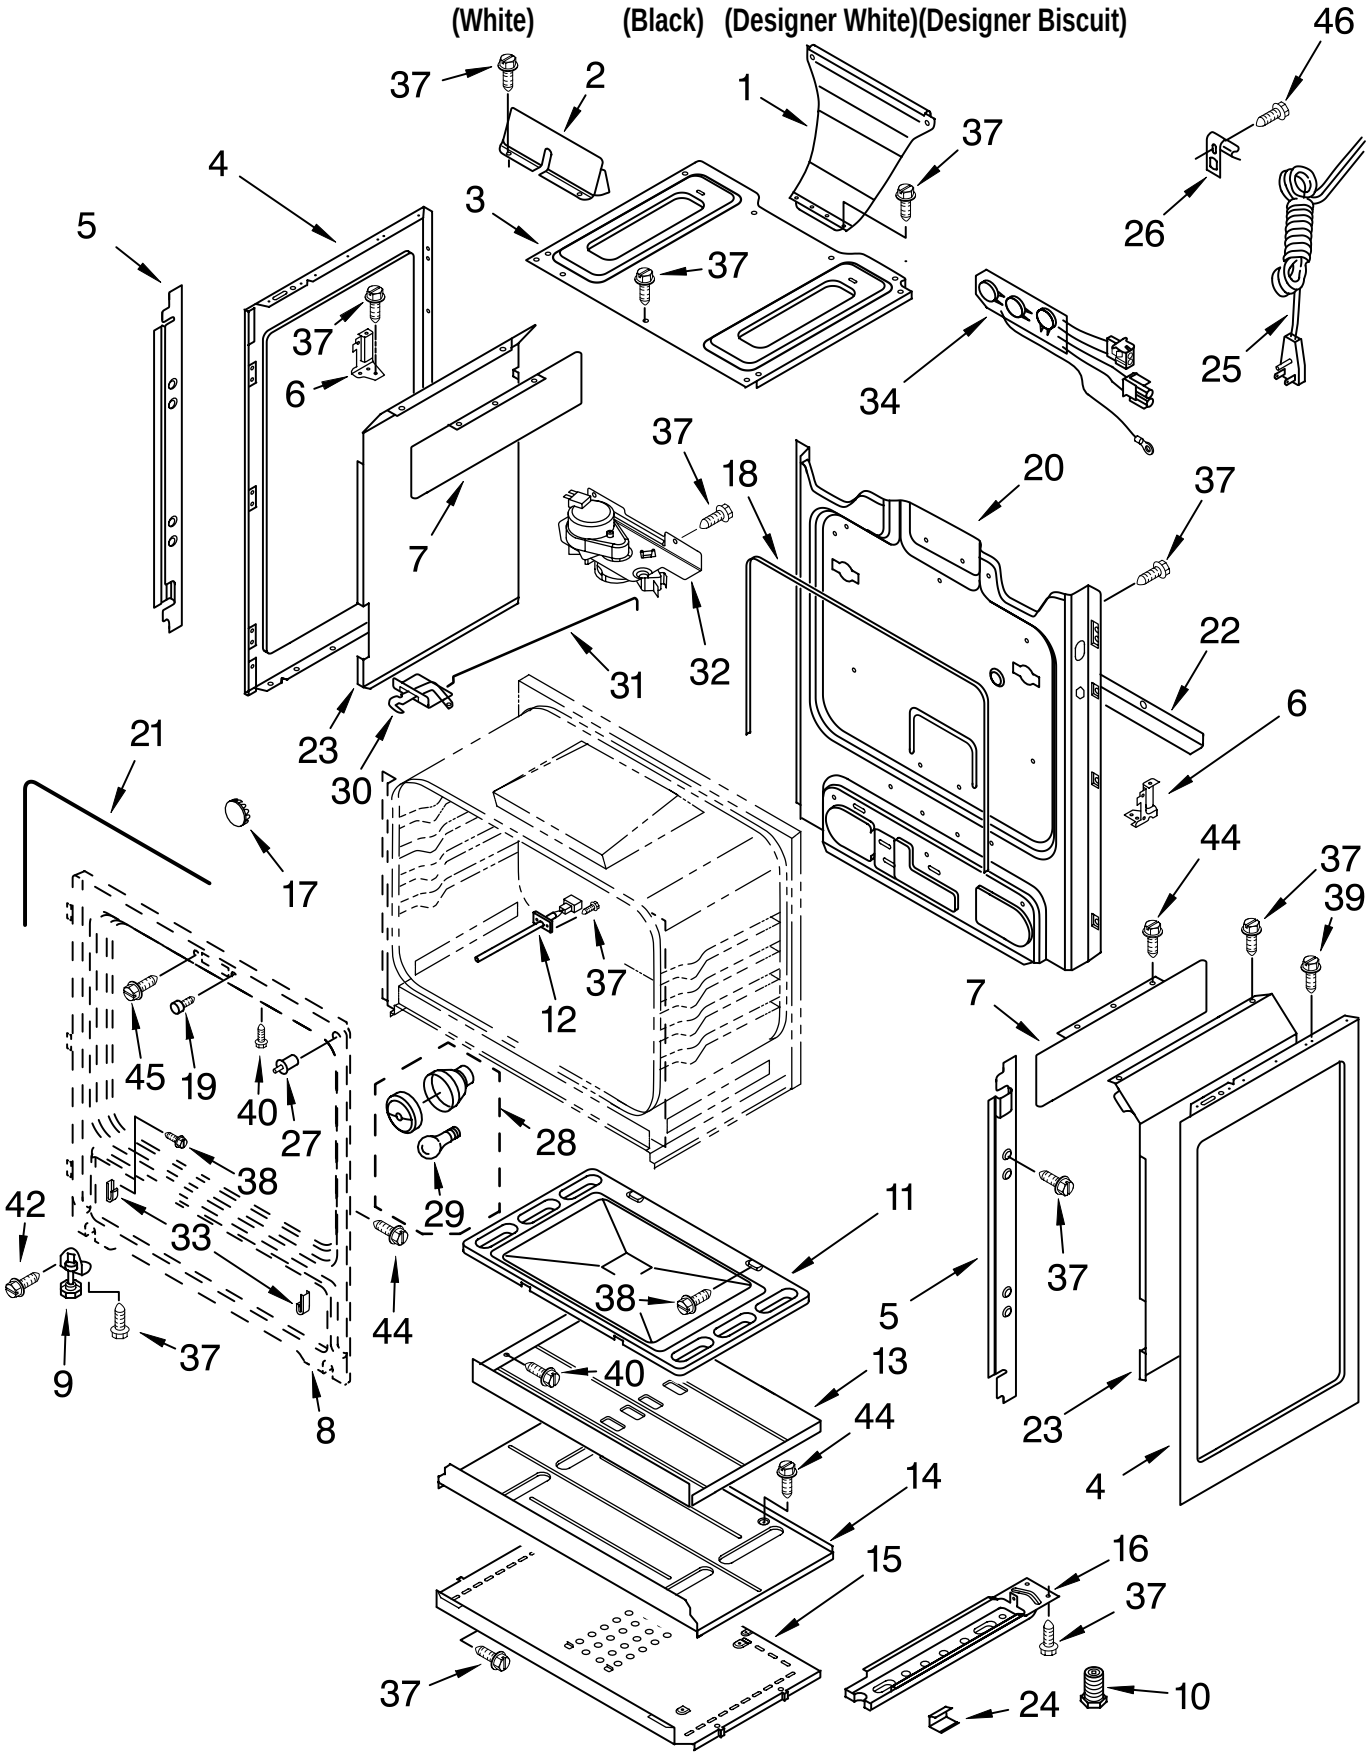


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**
**(White) (Black) (Designer White)(Designer Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 8523263 | Flue Box |
| 2 | 8272747 | Shield, Flue |
| 3 | 8273036 | Burner Box |
| 4 | | Panel, Side (2) |
| | 8053830 | White−Textured |
| | 8272519 | Biscuit−Textured |
| | 8053832 | Black−Textured |
| 5 | 8524111 | Shield, Heat (2) |
| 6 | 8523249 | Brkt, Manifold Mtg |
| 7 | 3196136 | Shield, Heat (2) |
| 8 | | Frame, Front (Non−Serviceable) |
| 9 | 3196037 | Foot, Front (2) |
| 10 | 312701 | Foot, Rear (2) |
| 11 | 3195097 | Bottom, Oven |
| 12 | 8273902 | Sensor, Oven |
| 13 | 8053967 | Baffle, Burner |
| 14 | 8053969 | Shield, Heat |
| 15 | 8053968 | Shield, Lower |
| 16 | 8053335 | Rail, Base (2) |
| 17 | 3196439 | Plug, Button |
| 18 | 8524109 | Seal, Oven Flange |
| 19 | 3196392 | Spacer, Door |
| 20 | 9757098 | Back, Main |
| 21 | 8522416 | Seal, Oven |
| 22 | 8053971 | Brace, Main Back |
| 23 | | Retainer, Insul. |
| | 3196523 | Left Hand |
| | 3195726 | Right Hand |
| 24 | 3196576 | Clip, Panel (6) |
| 25 | 9757891 | Cord, Power |
| 26 | 3196256 | Clamp, Cord |
| 27 | 3195993 | Switch, Door |
| 28 | 3196701 | Light Socket Assy |
| 29 | 311255 | Bulb, Oven Light |
| 30 | 3196119 | Latch, Door |
| 31 | 3196960 | Rod, Latch |
| 32 | 3196958 | Latch−Mtr |
| 33 | 3195546 | Glide, Drawer |
| 34 | 9756133 | Suppressor, Trans |
| 37 | 3196178 | Screw |
| 38 | 3196152 | Screw |
| 39 | | Screw |
| | 3196166 | White |
| | 3196167 | Almond |
| 40 | 3196176 | Screw |
| 42 | 3196179 | Screw |
| 44 | 3196177 | Screw |
| 45 | 3196168 | Screw |
| 46 | 3196173 | Screw |

**INSULATION**

| | | |
|---|---|---|
| | 8524099 | Insulation, Wrap |
| | 8272614 | Insulation, Back |

# DRAWER & BROILER PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**
**(White) (Black) (Designer White)(Designer Biscuit)**

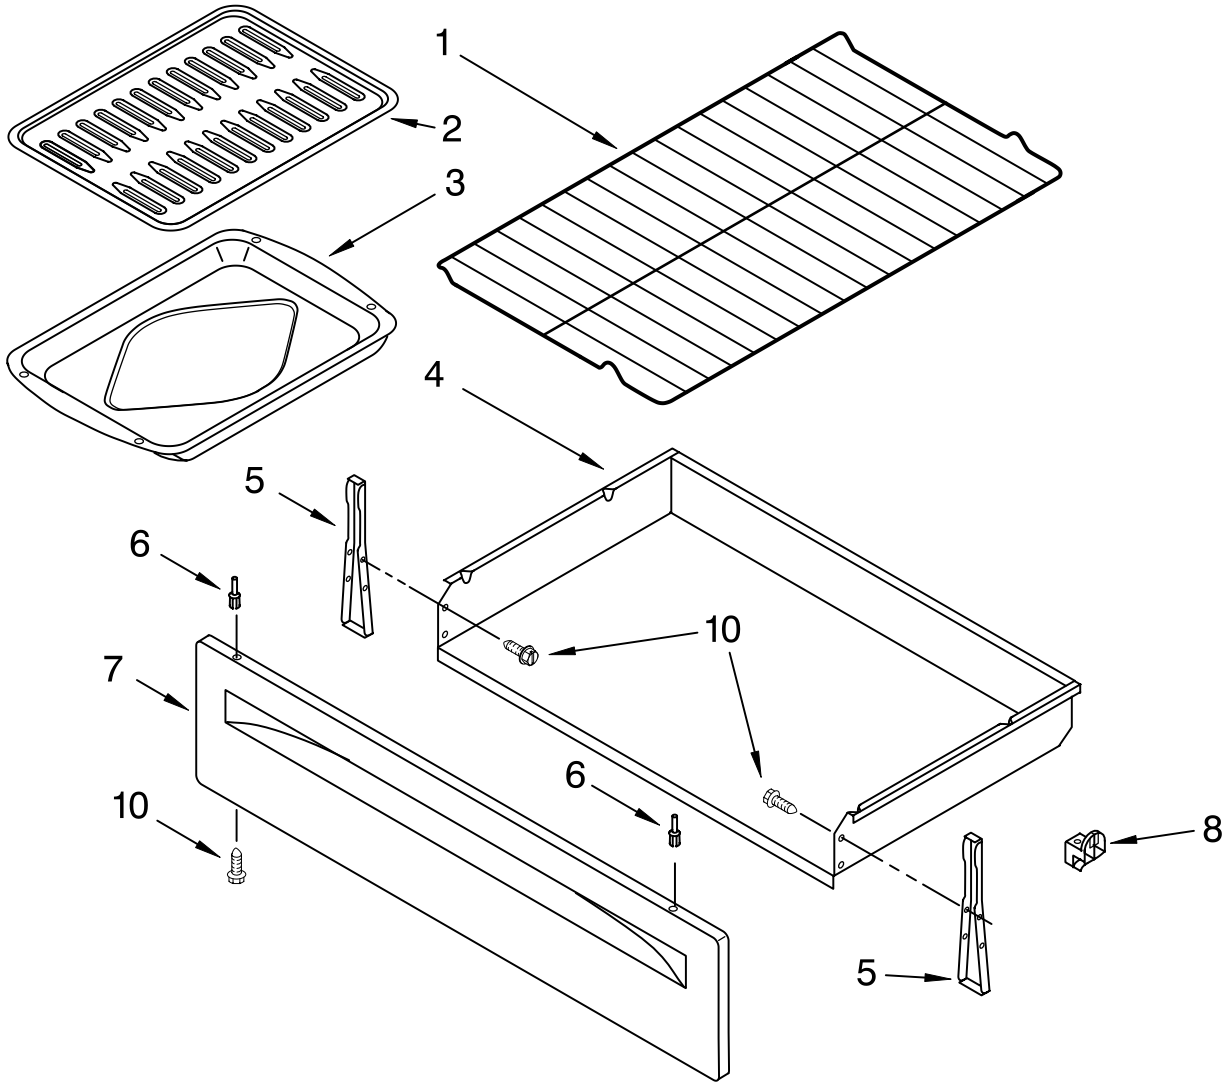


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 3195710 | Rack, Oven (2) |
| 2 | 3195996 | Grill, Broiler |
| 3 | 3196076 | Pan, Broiler |
| 4 | 8272606 | Drawer, Storage |
| 5 | 3196817 | Bracket, Drawer(2) |
| 6 | | Rivet, Push (2) |
| | 3196814 | White |
| | 3196815 | Almond |
| | 3196813 | Black |
| 7 | | Panel, Drawer Frnt |
| | 8053336 | White |
| | 8272502 | Biscuit |
| | 8053338 | Black |
| 8 | 8053334 | Spacer, Glide |
| 10 | 3196168 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**

**(White) (Black) (Designer White)(Designer Biscuit)**

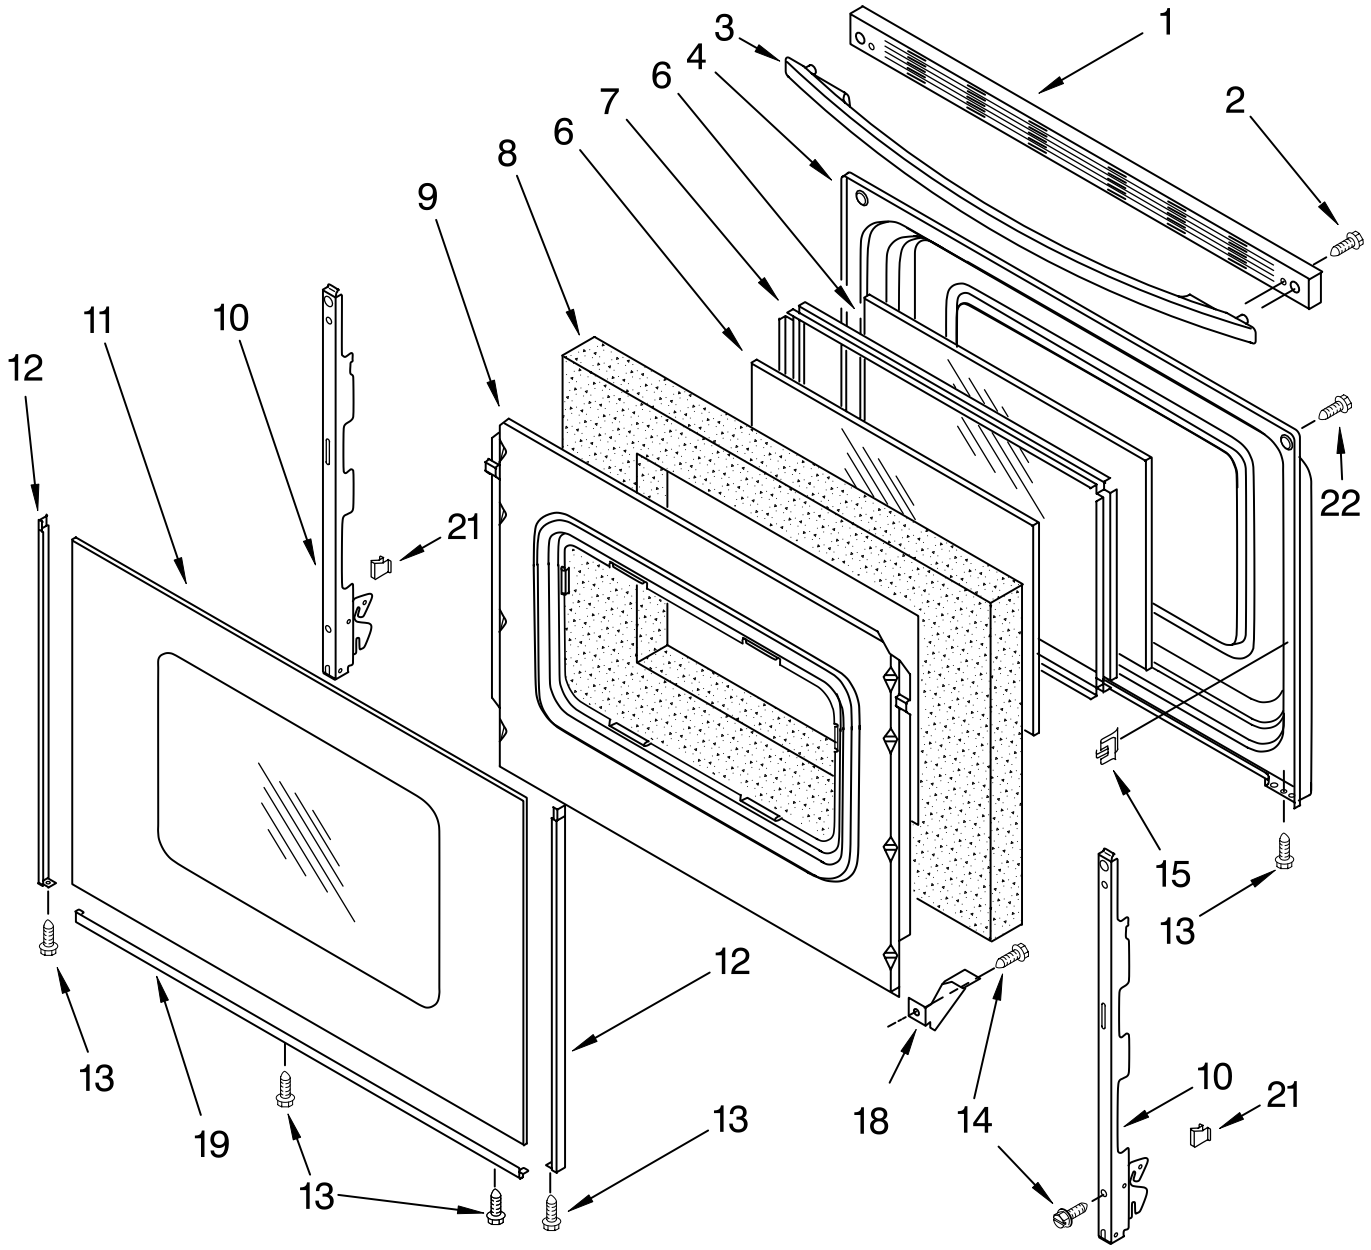


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Trim, Top |
| | 3196819 | Black |
| | 8522433 | White |
| | 8522434 | Biscuit |
| 2 | 3196164 | Screw |
| 3 | | Handle, Door |
| | 3195922 | Black |
| | 8522444 | White |
| | 8522445 | Biscuit |
| 4 | 3186292 | Liner, Door |
| 6 | 8053948 | Glass, Inner (2) |
| 7 | 3186289 | Frame, Glass |
| 8 | 8272618 | Insulation, Door |
| 9 | 3186297 | Retainer, Insul. |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 10 | 8053807 | Hinge, Door |
| 11 | | Glass, Outer Door |
| | 8053478 | Black |
| | 8053480 | White |
| | 8272498 | Biscuit |
| 12 | | Trim, Door Side |
| | | Left Hand |
| | 8523171 | Black |
| | 8523172 | White |
| | 8523173 | Biscuit |
| | | Right Hand |
| | 8523165 | Black |
| | 8523166 | White |
| | 8523167 | Biscuit |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 13 | 3196160 | Screw |
| 14 | 3196165 | Screw |
| 15 | 3196025 | Clip, Door Glass |
| 18 | 3196794 | Bracket, Window(2) |
| 19 | | Trim, Bottom |
| | 8523177 | Black |
| | 8523175 | White |
| | 8523178 | Biscuit |
| 21 | 3196925 | Clip, Door Stop |
| 22 | 3196161 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MISCELLANEOUS PARTS

**For Models: SF367LEMW0, SF367LEMB0, SF367LEMQ0, SF367LEMT0**
**(White) (Black) (Designer White)(Designer Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|

Following Parts Not Illustrated

**SPLICING WIRES−−25FT. LENGTH**

| | |
|---|---|
| 242828 | Wire, Black 12 Ga. 150° c |
| 8316781 | Wire, Black 14 Ga. 150°c |
| 242821 | Wire, Blue 14 Ga. 150°c |
| 242822 | Wire, Brown 14 Ga. 150°c |
| 242830 | Wire, Brown 14 Ga. 200°c |
| 242823 | Wire, Green 14 Ga. 150°c |
| 242824 | Wire, Orange 14 Ga. 150°c |
| 242829 | Wire, Red 12 Ga. 150°c |
| 242825 | Wire, Red 14 Ga. 150°c |
| 242831 | Wire, Red 14 Ga. 200°c |
| 242826 | Wire, White 14 Ga. 150°c |
| 242827 | Wire, Yellow 14 Ga. 150°c |
| 242832 | Wire, Yellow 14 Ga. 200°c |

**REFINISHING MATERIAL**

| | |
|---|---|
| 799832 | Kit, Porcelain Repair (White) |
| 242756 | Touch−Up Self−Clean(1/2 Pt) |
| 261582 | Grease |

**INSULATION**

| | |
|---|---|
| 261514 | Insulation, Fiberglass (1−1/2" x 24" x 120") |
| 240132 | Insulation, Fiberglass (2−1/2" x 22" x 120") |

**PAINT, TOUCH−UP (1/2oz.)**

| | |
|---|---|
| 72017 | White |
| 4392899 | Biscuit |
| 511873 | White Porcelain (2 Oz.) |

**PAINT, PRESSURIZED SPRAY (12 oz.)**

| | |
|---|---|
| 350930 | White |
| 4392901 | Biscuit |
| 285006 | Superior Black |
| 206922 | Primer (White) |

**PAINT, BULK (1 qt.)**

| | |
|---|---|
| 799344 | White (Uncut) |
| 4392900 | Biscuit (Uncut) |

**ACCESSORY PARTS**

| | |
|---|---|
| 241430 | Foil, Aluminum Oven (18" x 25') |

**ANTI−TIP KIT**

| | |
|---|---|
| 3176830 | Anti−Tip Kit |

**WIRING HARNESS PARTS**

| | |
|---|---|
| 8523424 | Harness, Main (EOC Pyro) |
| 8524207 | Harness, Wire Bake/Broil |
| 8523599 | Harness, Wire (Cooktop Spark) |
| 3196896 | Clip, Wire |
| 3196520 | Clip, Wire |
| 3195927 | Wire, Tie |
| 313438 | Clip, Harness |
| 3196696 | Clip, Harness |

**Miscellaneous**

| | |
|---|---|
| 814381 | Pin Kit−Dr Removal |